

Quick Mask—Illustrations not to scale

1. FRONT: Cut (1) 7" x 11" piece.
2. BACK POCKET: Cut (2) 5" x 11" pieces; mark 1" in from one long edge on each piece; fold edges up to line and sew 1/8"-1/4" seam to secure (Fig. 1).
3. NOSE PIECE: Cut pipe cleaner into 6" length.
4. RST, overlap back pieces, align the outer edges with front piece. Sew 7" edges with 1/4" seam. Turn and press.
5. TIES: Cut (2) 2-1/2" x WOF strips. Fold in half, press; fold both long edges to center and press, fold in half and press.
6. Find center of each tie and mark.
7. At the top of the front panel mark the center. Mark 3-1/4" to each side of the center (Fig. 2).
8. Align center of tie with top of front panel. Insert pipe cleaner under the flap of the tie centering it within the marks made in step 6 and secure in place (Fig. 3).
9. Start at one end of the tie and sew 1/4" seam. Watch for the pipe cleaner to be sure it is not caught in the seam.
10. Sew to the end of the tie.
11. Secure the pipe cleaner into the tie by sewing a line perpendicular to the outer edge at the 3-1/4" marks ending at the 1/4" seam line (or little beyond) (Fig. 3).
12. Align the center of the second tie with center mark on mask; pin place and sew the tie starting at one end with 1/4" seam.
13. PLEATS: Turn mask wrong side up with pipe cleaner away from you.
14. Mark the panel on each short side at 1" from the outer edge (Fig. 4).
15. Make a second mark at 1-1/2" from first mark.
16. Make a third mark at 1" from second mark.
17. Make a fourth mark at 1-1/2" from third mark.
18. Bring bottom 1" marks up to meet 1-1/2" marks and pin across.
19. Bring second 1" marks up to meet top 1-1/2" marks and pin across.
20. Start at top of tie edge and sew 1/4" seam from top to bottom edge to secure pleats. Repeat on other side.
21. Press and tie knots in ends of ties.

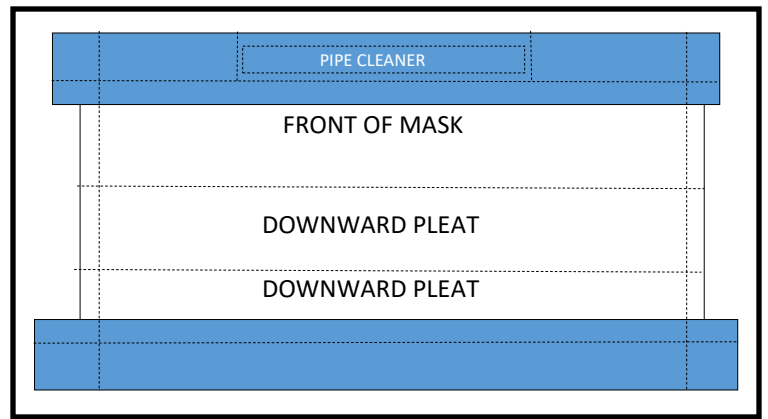


Fig. 1

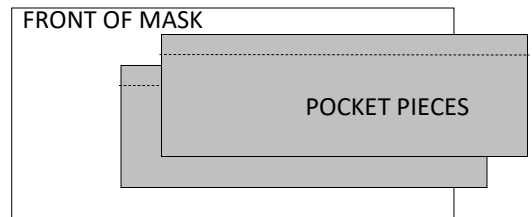


Fig. 2

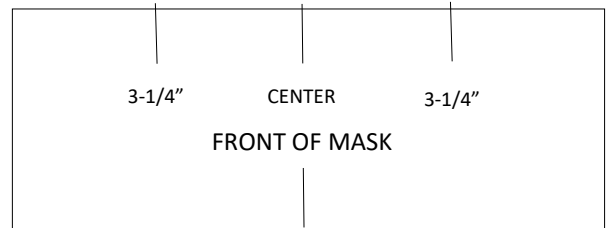


Fig. 3

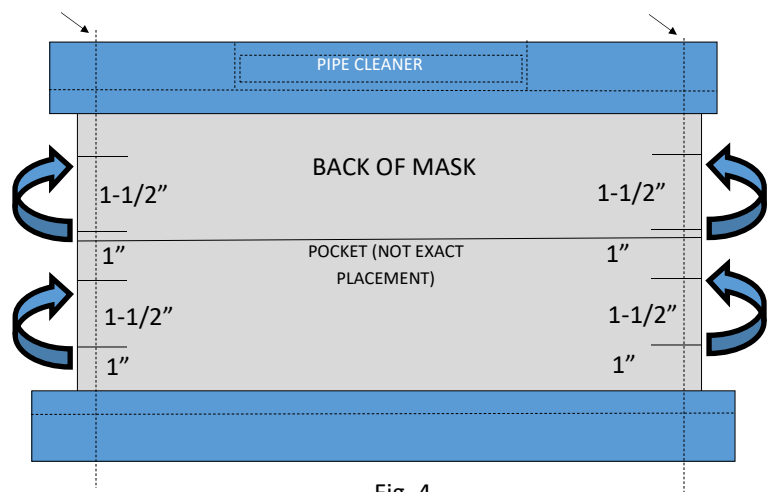
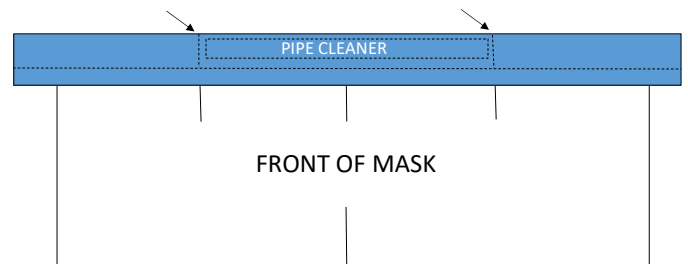


Fig. 4